



# Ceiling Tile Enclosure Installation for Ruckus 650, 750

## Instructions for Installation

- 1) Prior to installation, note the knockout hole provided for the RJ45 cable. Refer to Figure 1. A cord grip is supplied to protect and hold the RJ45 cable.
- 2) Prepare the ceiling tile grid for a 2' x 2' installation. If a 2' x 4' ceiling tile is being replaced, follow steps below, otherwise go to Step 3.
  - a) Cut existing 2' x 4' tile in half
  - b) Install T-bar provided to create a 2'x2' opening
  - c) Install the cut standard tile on one side and the enclosure base on the other side.

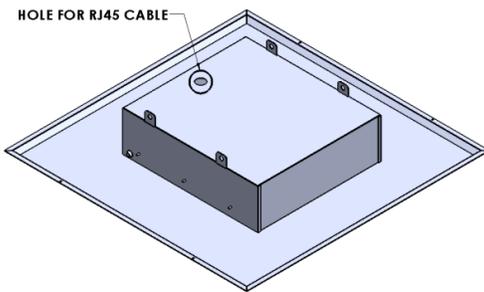


**Figure 1.**

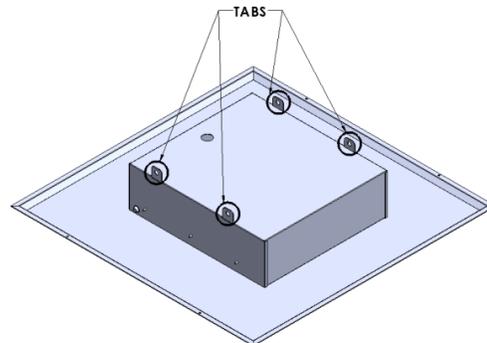

**Figure 2.**

**CAUTION:** Refer to local building codes to determine if additional support is required. Tabs are provided on the enclosure (see Figure 2) to secure to the building structure.


- 3) Insert RJ45 cable through the cord grip in the knock-out hole. Cable will be connected after the door is installed onto the enclosure.

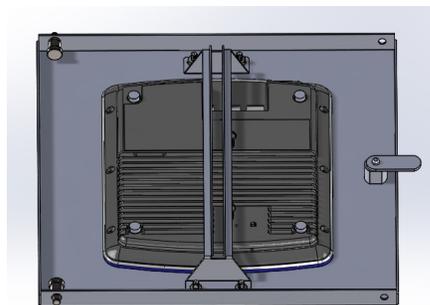


**Figure 3.**

- 4) Place the Access Point on a surface with the bottom facing upwards. Attach the white plastic T bar bracket that comes with the AP. Holding the door above the Access Point, lower it onto the Access Point. See Figure 3.
- 5) Attach the AP to the T Bar bracket using the small white tab supplied with the AP bracket.

# Ceiling Tile Enclosure Installation for Ruckus 650, 750

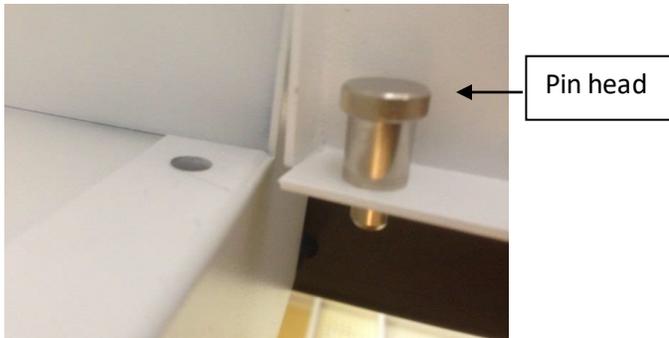

**Figure 4.**

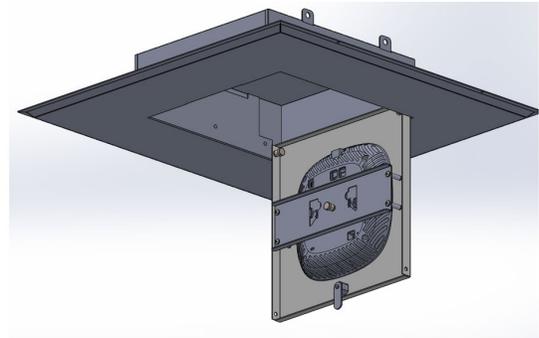

**Figure 5.**

- 6) Pull the pin head to retract and align it with the holes inside the ceiling enclosure and release. See Figure 4. A snap will be heard when the pin aligns with the hole.
- 7) Insert second pin so door hangs as shown in Figure 5.
- 8) Connect RJ45 cable to the access point.
- 9) Close the door and turn the key to lock the enclosure door.

## Door Removal and Reinstallation

- 1) Unlock the door and allow it to hang open as shown in Figure 5.
- 2) Pull the head of the two spring pins toward the center of the door to retract the pins and remove the door. See Figure 6.
- 3) To reinstall the door, pull pin heads to retract the pins and align with the holes in base. Release the pin heads to engage the door.
- 4) Swing the door shut and lock the door.



**Figure 6.**