


Installation Manual

Ventite Solid Lid CTEN

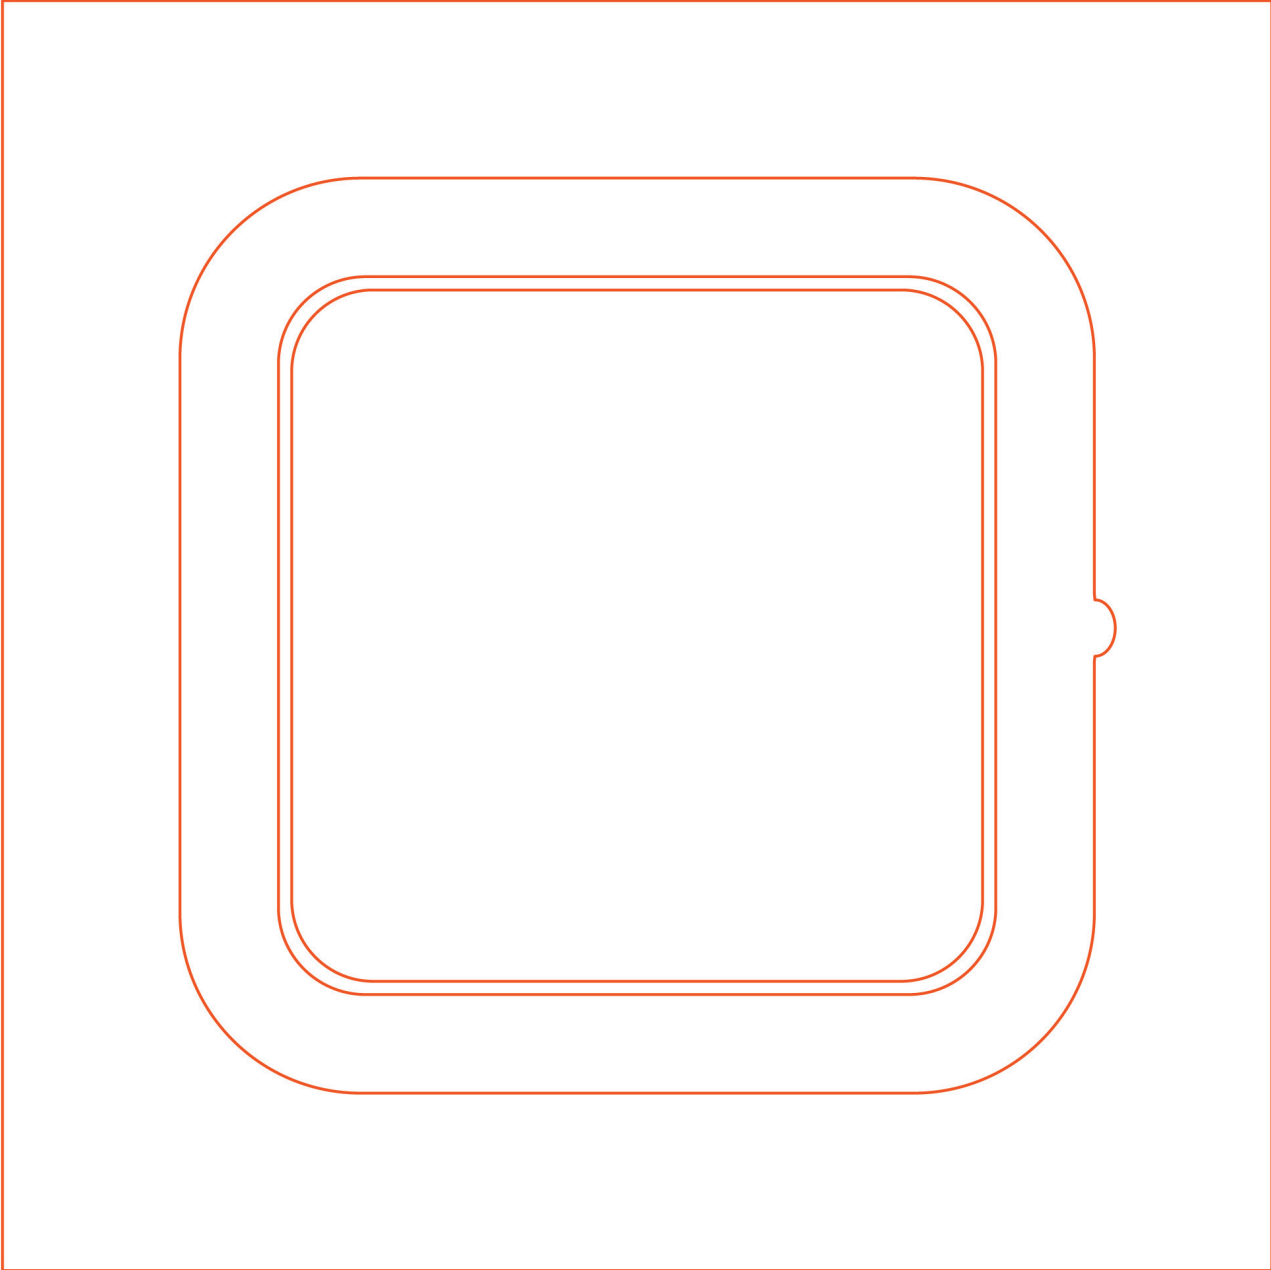

Instructions

Step 1

The Ventite solid lid CTEN enclosure comes assembled from factory as shown.



Step 2

Slide the plastic lid off by lifting the finger tab on the lid and sliding the lid so the finger tab goes toward the center of the assembly.



Lid Slide



Lid Removed

Step 3


Remove the aluminum back plate by loosening the 4 thumb screws.

For installing Cisco Access Points (APs):

- Follow steps A-B before moving onto step 4.

For installing Aruba Access Points (APs):


- Follow steps C-D before moving onto step 4.

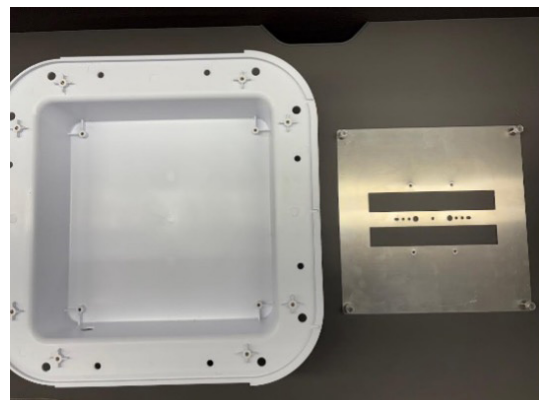

Cisco AP Installation

Step A

Attach the Cisco mounting bracket that comes with the AP to the back plate using the 4 small screws supplied in the hardware bag.

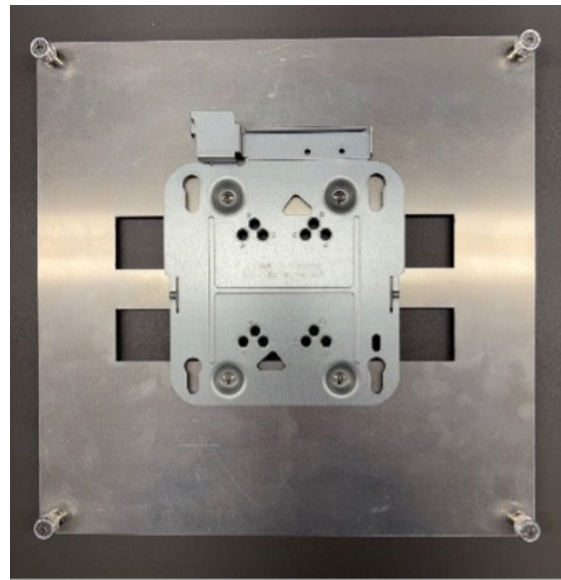

Step B

Slide the AP onto the AP bracket.



Aruba AP Installation

Step C

Remove the black factory bracket from the back of the Aruba AP by removing two small screws.



Step D

Attach the AP to the back plate using the two small screws from Step C.



Step 4


Install the cord grip into the side of the plastic base.



Step 5


Run the ethernet cable* through the cord grip and terminate. Replace the foam ceiling tile with the Ventev Aluminum base assembly in the ceiling grid.

**Ethernet cable not supplied.*

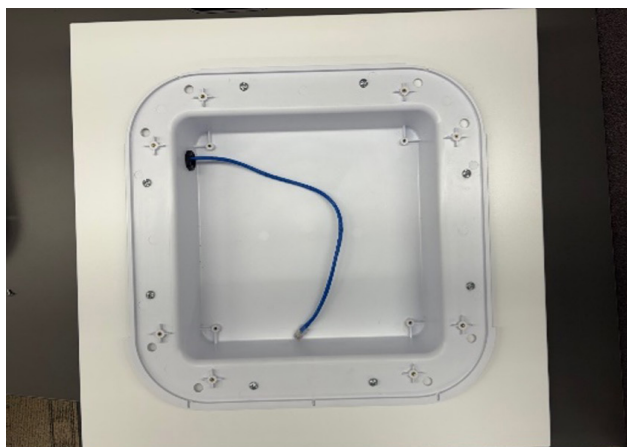


Step 6

Attach ethernet cable to AP.

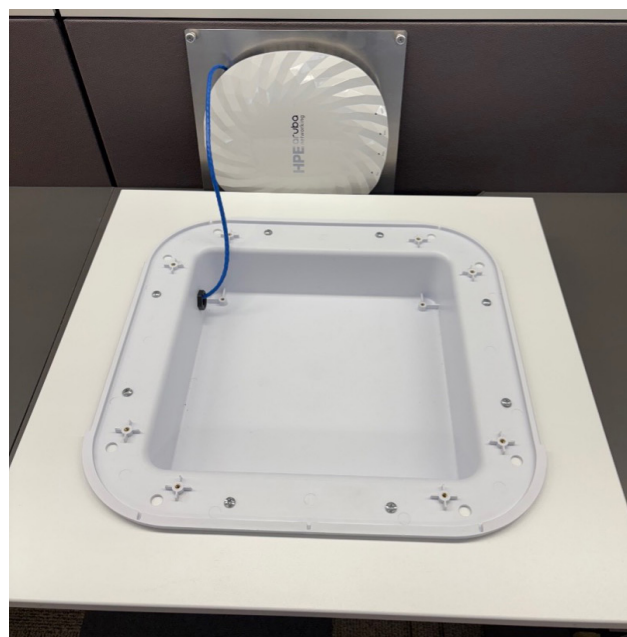


Step 7

Secure aluminum back plate with AP to inside of plastic base with the 4 thumb screws.

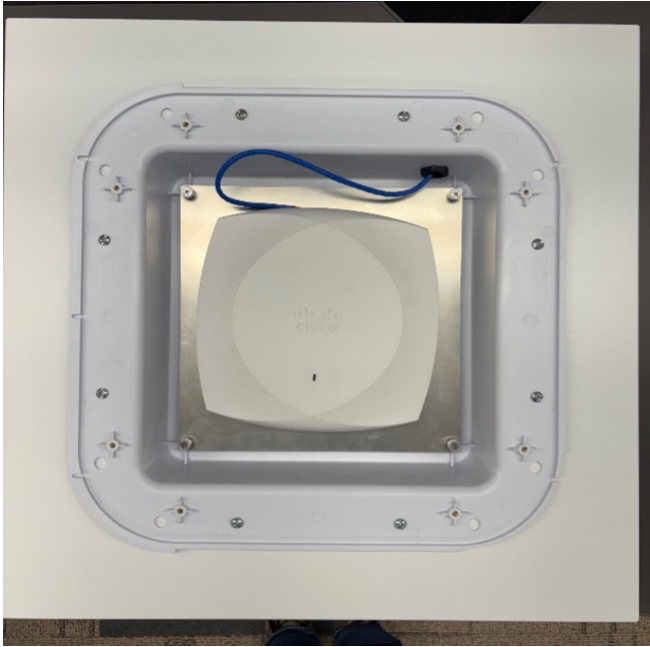

Cisco

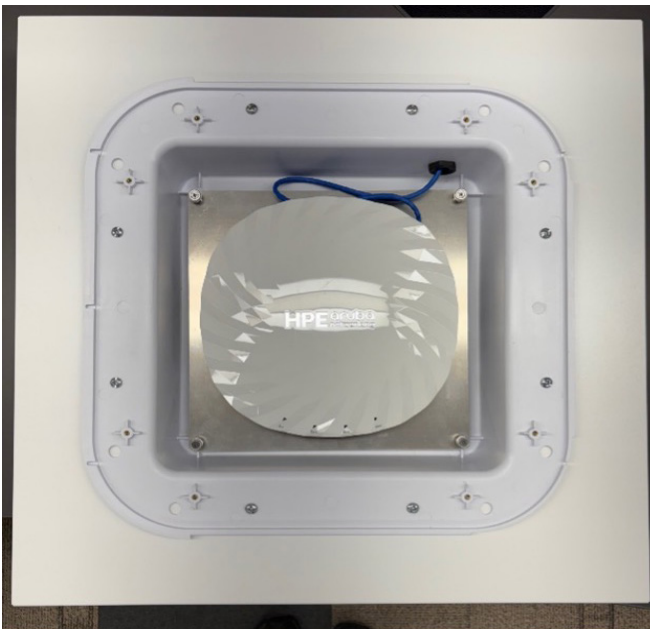

Aruba

Step 8

Slide the lid onto the plastic base. The under side of the lid has 3 tabs on each side that slide under the base rail. Slide the lid completely on.



Lid Tabs



Complete



11126 McCormick Road,
Hunt Valley, MD 21031
800-851-4965
sales@ventev.com

ventevinfra.com

