Universal L-Bracket for VenDome Antenna Pole, Mast, and Wall Mounting



Installation Instructions:

For Pole and Mast Mounting

For 2 in. OD pipe/pole, clamp L-bracket (item #1) to the pipe/pole using supplied U-bolts (item #2) and hardware. Use pole clamp bracket (item #3) against the pipe/pole as shown in Figure 1. Firmly tighten hardware.

For Pole/Mast Larger Than 2 in. OD


Use supplied stainless steel band clamps (item #8) and pass through slots on the L-bracket as shown in Figure 2. Firmly tighten screw on the band clamp.

For Wall Mounting

Secure L-bracket (item #1) using appropriate ¼ in. screw and hardware to wall. Note: Installer to supply appropriate wall hardware.


Antenna Mounting

- 1. Remove nut from the antenna stud, slide leads through large open slot on the bracket, and pass antenna stud through mounting hole.
- 2. Re-insert the antenna nut (and use flat washer if needed) and firmly tighten it.

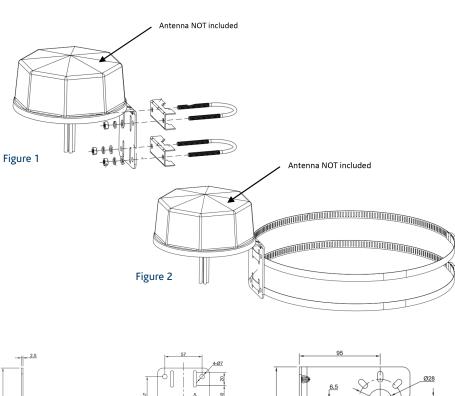







All dims are in mm.


Every Ventev bracket is RoHS compliant and covered by company's 2-year warranty program.



Description	SKU	MFG Part #
Universal L-bracket	274461	VEN-
2-14 in. OD		ULBD-0214

Features & Benefits

- Universal L-bracket works with most VenDome and outdoor omnidirectional antennas
- Heavy duty construction suitable for harsh environment deployments; Mounts to wall or pole/mast from 2 to 14 in. OD
- Slotted L-bracket offers quick antenna mounting

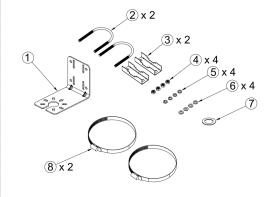

No.	Item Description	Qty.
1	L-Bracket	1
2	U-bolt 2 in. OD	2
3	Pole Clamp Bracket	2
4	Nuts for U-bolt	4
5	Lock Washer for U-bolt	4
6	Flat Washer for U-bolt	4
7	1 in. Flat Washer for U-bolt	1
8	Pole Clamps, Stainless Steel	2