

Outdoor Wi-Fi Bollard

Instructions for installation:

- 1) All instruction steps apply to both the flat and twist cap offerings. Remove and discard the two shipping bolts attached to the bollard cover and frame. Slide the bollard cover off to access the internal frame.

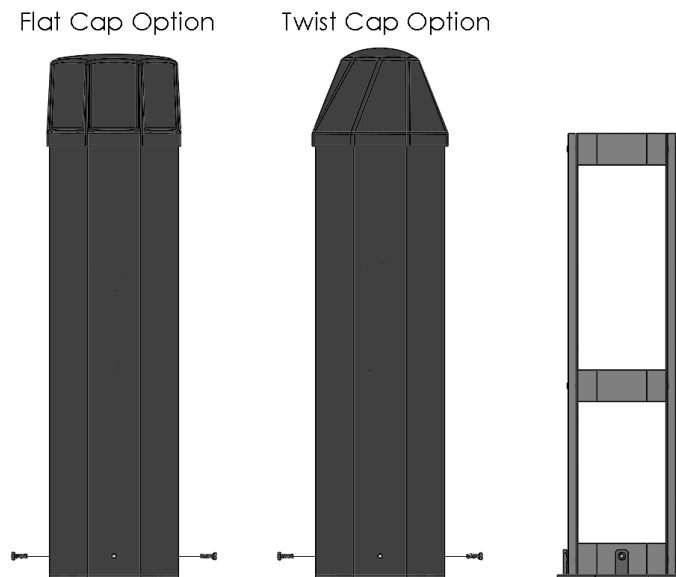


Figure 1.

- 2) It is recommended to attach the bollard's frame to a prepared concrete foundation (not supplied) using four $\frac{3}{8}$ " studs (or some other type of fastener) securely placed approximately $3\frac{3}{4}$ " apart in a square pattern in the foundation.

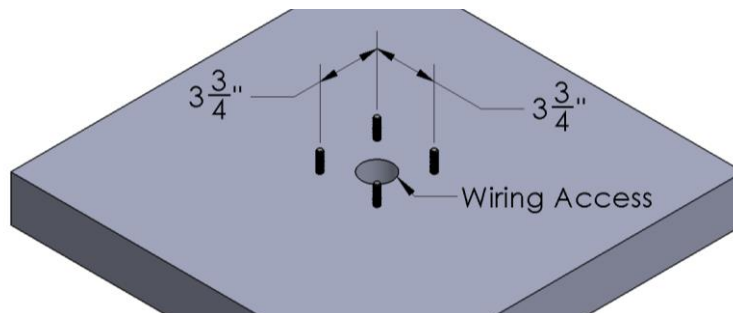


Figure 2.

Outdoor Wi-Fi Bollard

- 3) Place the metal base of the frame over the bolts and fasten with hex nuts and route the cabling through the 3" hole in the metal base.

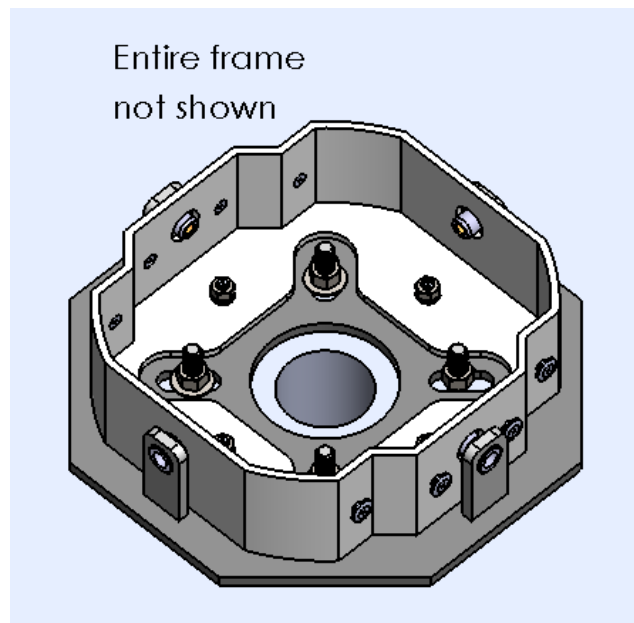


Figure 3.

- 4) Proceed by referring to the section dedicated to the access point to be installed.

Outdoor Wi-Fi Bollard

Aruba Access Point Installation

- 1) Holding the Aruba T-bar clip against the T-bar of the bracket, as shown in Figure 4, push lightly into the T-bar in order to depress the plastic tabs. Twist into place.

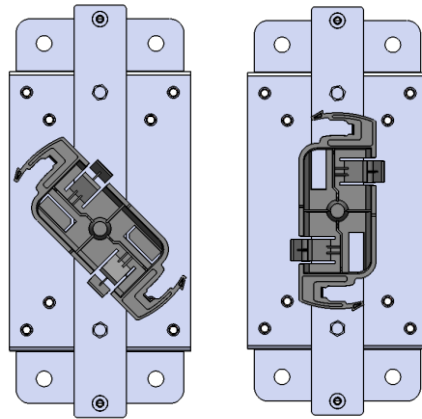


Figure 4.

- 2) Now install the Aruba access point by placing it against the Aruba T-bar clip and twisting it into place. If the access point is sliding down the T-bar, move the T-bar clip and access point downward until it contacts the lower positive stop, as shown in Figure 5.

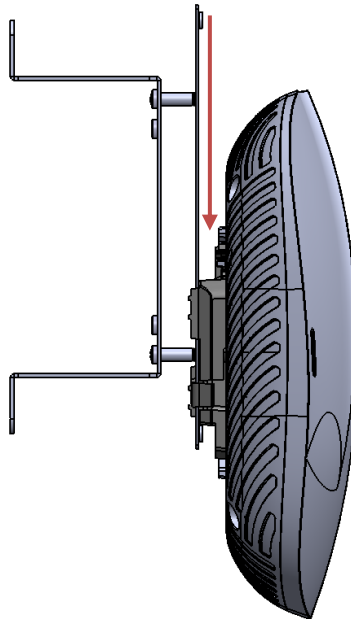


Figure 5.

Outdoor Wi-Fi Bollard

- 3) Install bracket on the interior of the frame using the supplied $\frac{1}{4}$ " screws and hex nuts, with the head of the screw on the exterior of the frame. Insert ethernet and power cables.

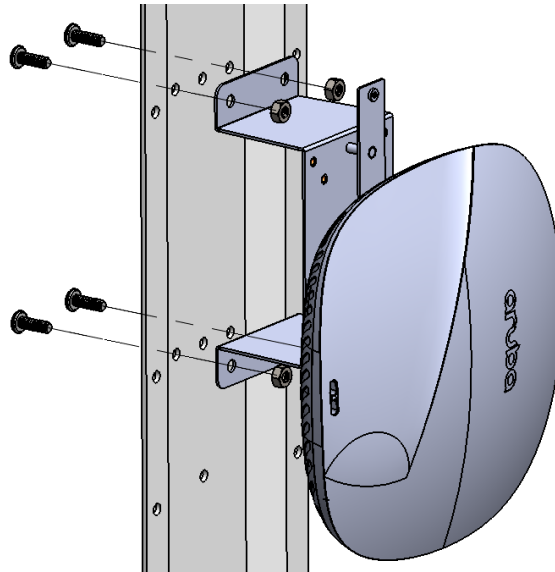


Figure 6.

Meraki Access Point Installation

- 1) Place the Meraki provided T-clips onto the T-bar and twist into place. Using the screw holes on the Meraki supplied mounting plate, space the brackets to the proper length. Tighten the set screws. Additionally, cable ties can be wrapped around the T-bar and the clips for additional security.

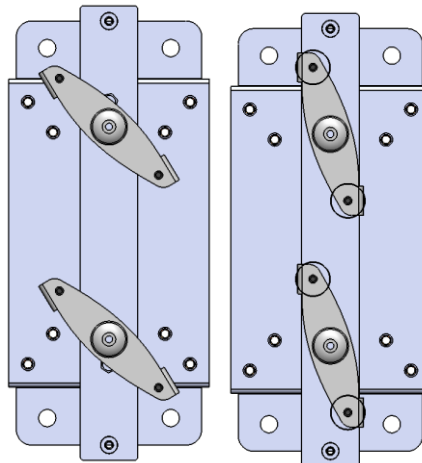


Figure 7.

Outdoor Wi-Fi Bollard

- 2) Attach the Meraki supplied mounting plate to the T-bar clips using the (2) screws provided in the access point hardware kit.

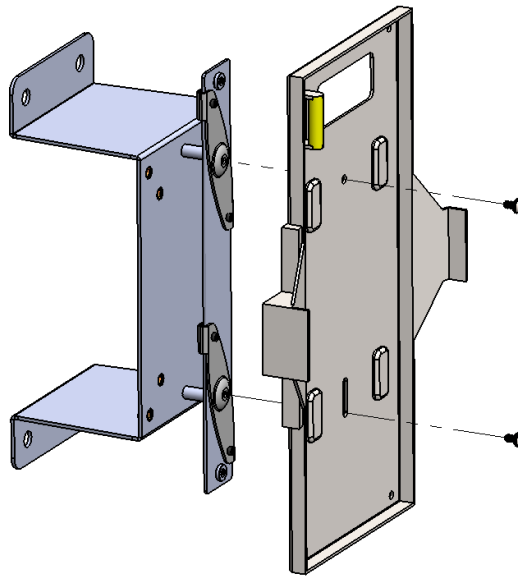


Figure 8.

- 3) Install bracket on the interior of the frame using the supplied 1/4" screws and hex nuts, with the head of the screw on the exterior of the frame.

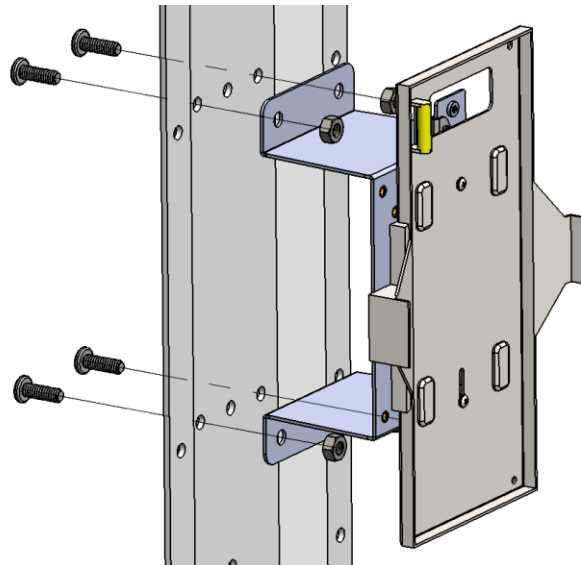


Figure 9.

Outdoor Wi-Fi Bollard

- 4) Attach the Meraki access point onto the mounting bracket and insert ethernet and power cables.

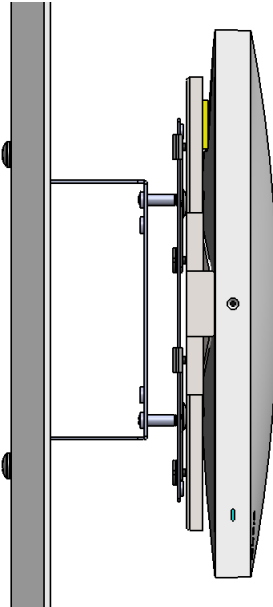


Figure 10.

Cisco Access Point Installation

- 1) Attach a Cisco supplied universal bracket to the bracket, using (4) #8-32 x 0.375" screws.

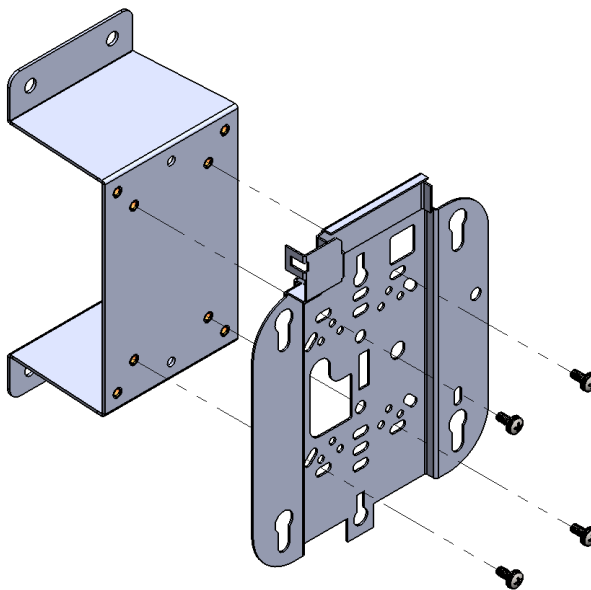


Figure 11.

Outdoor Wi-Fi Bollard

- 2) Install bracket on the interior of the frame using the supplied $\frac{1}{4}$ " screws and hex nuts, with the head of the screw on the exterior of the frame.

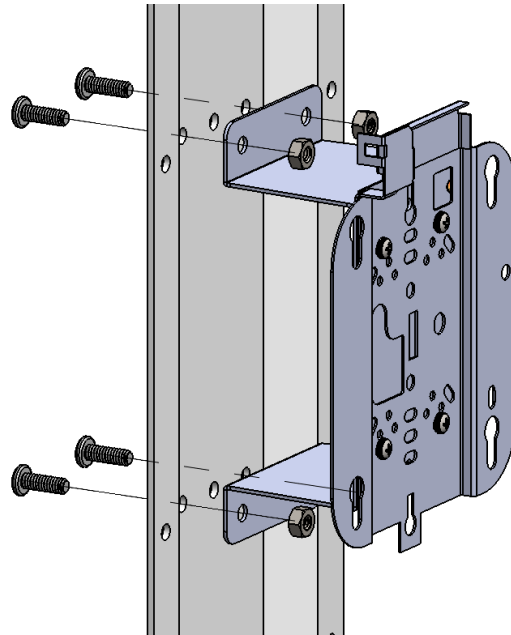


Figure 12.

- 3) Install the Cisco access point by sliding the feet on the back of the unit into the keyholes on the Cisco universal bracket. Insert ethernet and power cables.

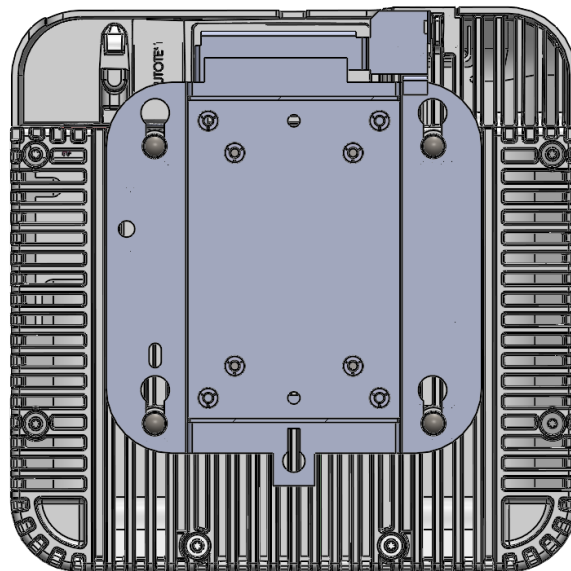


Figure 13.

Outdoor Wi-Fi Bollard

Installing an External Antenna

- 1) If using an external access point with an omni-directional antenna, route the antenna wires through the top cutouts of the frame and secure the antenna with hardware. Connect the antenna to the access point.

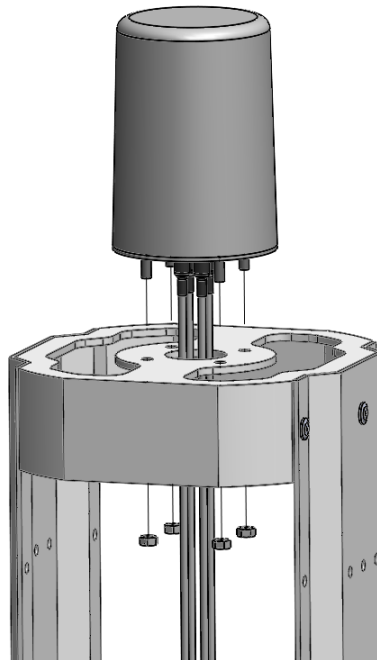


Figure 14.

- 2) If desired, utilize the provided cable ties for cable management.

Outdoor Wi-Fi Bollard

Final Steps

- 1) Slide the bollard cover over the frame, taking care to not damage any parts of the frame, access point, and antenna, keeping the four holes in the bollard cover aligned with the four holes on the bottom.

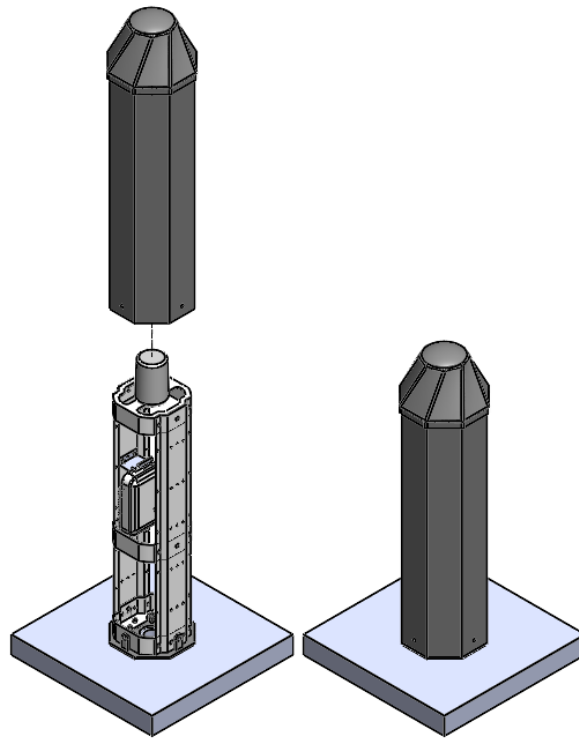


Figure 15.

- 2) Align the holes on the bollard cover and the metal base and install the QTY (4) supplied security screws using the included spanner bit.

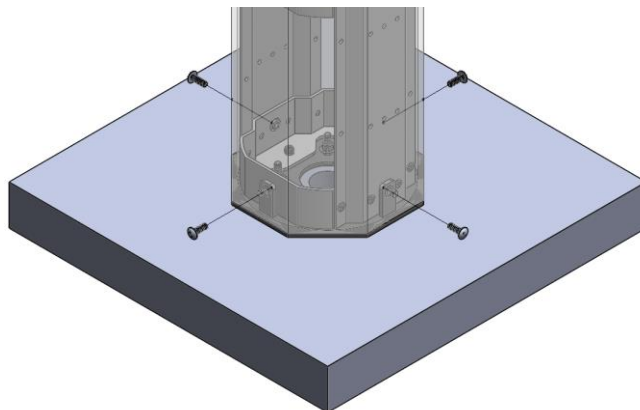


Figure 16.